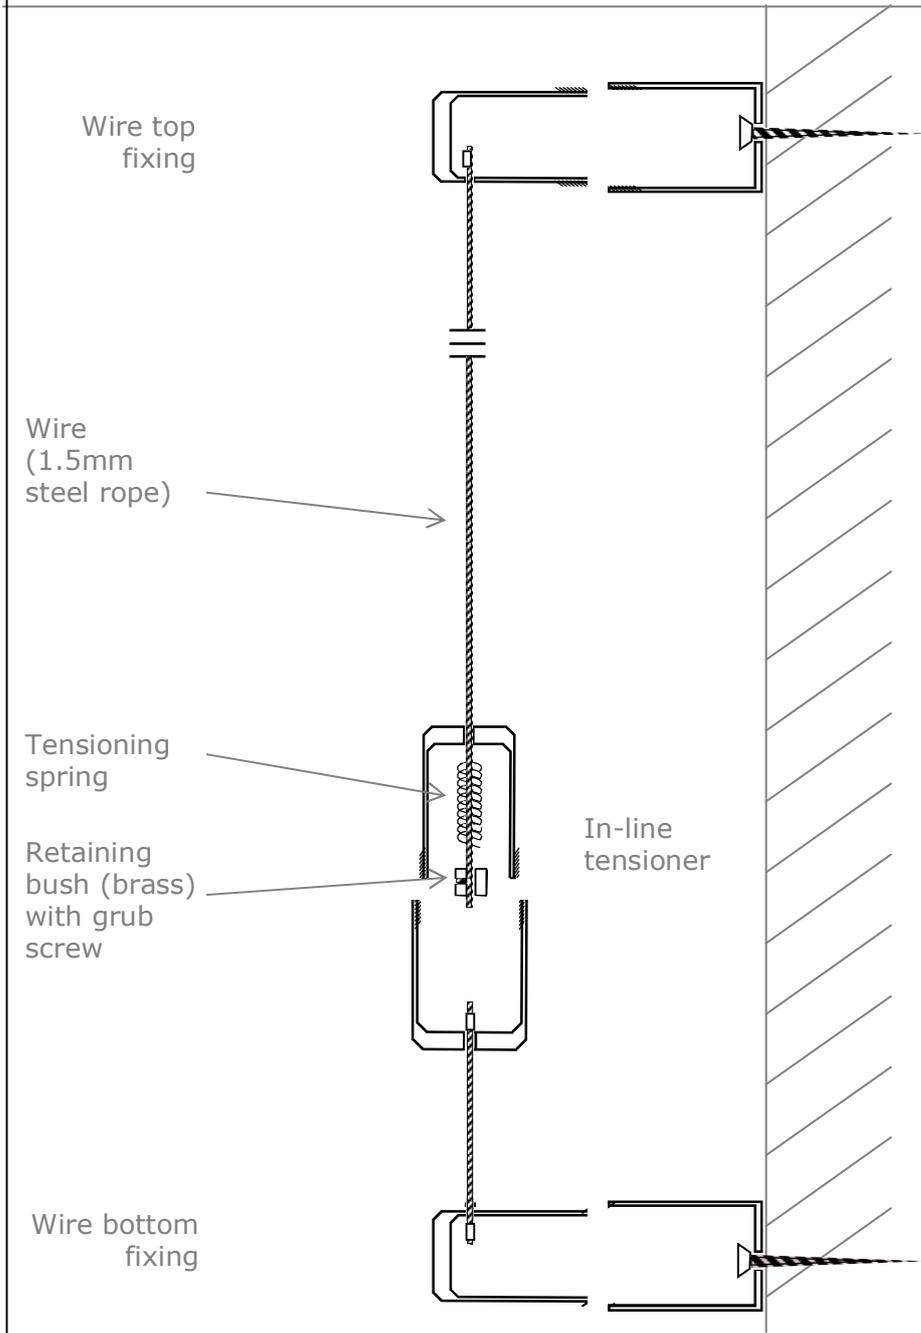


PW6: Single columns of poster holders suspended between ceiling and floor on wires or bars

FIXING INSTRUCTIONS - WALL-SUSPENDED WIRES

<p>Screw into wall using appropriate fixings for wall material (fixings not supplied - choose appropriate)</p> <p>NOTE that all weight of a suspended display is supported by the top fixings, which therefore need to be firm fixings into a substantial wall.</p>	<ol style="list-style-type: none"> 1. Mark the required positions of the wire top fixings on the wall. Use a spirit level to ensure that these are level. The table on page 3 shows the wire centres required for the different standard sizes of poster holders. 2. Use a plumb line to mark the fixing points for the bottom fixings vertically below the top fixings, then check that these are the same distance apart as the top fixing positions. <p>For each wire:</p> <ol style="list-style-type: none"> 3. Unscrew the in-line tensioner. 4. Unscrew the top fixing and fix the outer sleeve to the wall in its marked position using appropriate fixings (not supplied). 5. Screw the top fixing (with the wire and top of the in-line tensioner attached) back together. 6. Unscrew the bottom fixing and screw the outer sleeve to the wall using appropriate fixings. 7. Screw the bottom fixing (with the bottom of the in-line tensioner attached) back together. 8. Loosen the brass bush at the bottom of the wire (inside the top part of the in-line tensioner) by partly unscrewing the grub screw (using the allen key supplied), so that the bush can slide up the wire. 9. Hold the outer sleeve of the in-line tensioner in position above the bottom fixing. Pull the wire taut, then position the brass bush so that the top of the bush is in line with the top of the outer sleeve of the in-line tensioner. 10. Tighten the grub screw in the brass bush, then cut off the excess wire below it. 11. Screw the in-line tensioner back together until the wire is taut. 12. (Repeat steps 3 - 10 until all wires have been fitted).
	
<p>Screw into wall using appropriate fixings for wall material (fixings not supplied)</p> <p>NOTE that the bottom fixing anchors the display, but does not support any of its weight</p>	

PW6: Single column of acrylic poster holders clamped to wall-suspended wires

FIXING INSTRUCTIONS - CLAMP-ON POSTER HOLDERS

FIX CLAMPS TO HOLDERS:

For each poster holder:

1. Use the allen key provided to loosen the grub screws in the wide slot in each clamp so that the acrylic holder can be positioned in the slot.

FIX HOLDERS TO WIRES:

2. Fit two clamps to each side of the poster holder in the desired positions, using the allen key to tighten the grub screws when the holder is in position.
3. Remove the grub screws from the narrower slot in each clamp so that the wires can slide into these.
4. Position the holder between the wires, and screw the grub screws back into the clamps to fix the holder loosely in position, but still allowing it to slide.
5. Slide the holder to its required position and tighten the clamps on to the wires on one side.
6. Use a spirit level to ensure that the holder is horizontal, then tighten the grub screws on the other side.

WIRE CENTRES FOR SUSPENDED POSTER HOLDERS

POSTER HOLDER SIZE	A5 portrait	A5 landscape A4 portrait	A4 landscape A3 portrait	A3 landscape A2 portrait	A2 landscape A1 portrait	A1 landscape A0 portrait	Double A4 portrait	Triple A4 portrait	Double A4 landscape Double A3 portrait	20"x30" portrait	20"x30" landscape 30"x40" portrait
WIDTH OF POSTER	148mm	210mm	297mm	420mm	594mm	841mm	2x 210mm (12mm gap between)	3x 210mm (12mm gaps between)	2x 297mm (12mm gap between)	508mm (20")	762mm (30")
WIDTH OF HOLDER	172mm	234mm	321mm	444mm	618mm	865mm	456mm	678mm	630mm	532mm	786mm
CENTRES FOR WIRES	182mm	244mm	331mm	454mm	628mm	875mm	466mm	688mm	640mm	542mm	796mm